

荘銀タクト鶴岡 DMX一覧

フルカラーLED UH	下手					中央					上手				
	I	R	G	B	W	I	R	G	B	W	I	R	G	B	W
	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269

4SUS	調光器①				調光器②				調光器③				調光器④				調光器⑤			
	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118

3SUS	調光器①				調光器②				調光器③				調光器④				調光器⑤			
	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98

2SUS	調光器①				調光器②				調光器③				調光器④				調光器⑤			
	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78

フルカラーLED 2bo (スクリーンと共)	下手					中央					上手				
	I	R	G	B	W	I	R	G	B	W	I	R	G	B	W
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

1BL	調光器①				調光器②				調光器③				調光器④				調光器⑤				調光器⑥				調光器⑦			
	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58

フルカラーLED 1bo (1BLと共)	下手					中央					上手				
	I	R	G	B	W	I	R	G	B	W	I	R	G	B	W
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

P.SUS	調光器①				調光器③				調光器②			
	205	206	207	208	213	214	215	209	210	211	212	

C.L.

1CL	上段1	上段2	上段3	上段4	上段5	上段6	SF-4	上段7	上段8	上段9	上段10	SF-4	上段11	上段12	上段13	上段14	上段15	上段16
	159	160	163	164	167	168		172	173	176	177		181	182	185	186	189	190
	1.5kw トツ 32台																	
750w SF-4 10° 4台	下段1	下段2	下段3	下段4	下段5	下段6	171	下段7	下段8	下段9	下段10	180	下段11	下段12	下段13	下段14	下段15	下段16
	161	162	165	166	169	170		174	175	178	179		183	184	187	188	191	192

下FR			
1-1	1-2	1-3	1-4
119	120	121	122
2-1	2-2	2-3	2-4
123	124	125	126
3-1	3-2	3-3	3-4
127	128	129	130
4-1	4-2	4-3	4-4
131	132	133	134
SF1	SF2	SF3	SF4
135	136	137	138

1kw トツ 4台4色

SF-4 26° 2台 /SF-4 zoom 2台

2CL	2CL 750kw SF-4 10° 上下6台												
	下1	下2	下3	下4	下5	下6	上1	上2	上3	上4	上5	上6	
	193	194	195	196	197	198		199	200	201	202	203	204

客席DL							
349	350	351	352	353	354	355	356
							非常灯連動
357	358	359	360	361	362	363	364

上FR			
1-1	1-2	1-3	1-4
139	140	141	142
2-1	2-2	2-3	2-4
143	144	145	146
3-1	3-2	3-3	3-4
147	148	149	150
4-1	4-2	4-3	4-4
151	152	153	154
SF1	SF2	SF3	SF4
155	156	157	158

1kw トツ 4台4色

SF-4 26° 2台 /SF-4 zoom 2台

荘銀タクト鶴岡 DMX一覧

フルカラーLED	下手					中央					上手				
LH	I	R	G	B	W	I	R	G	B	W	I	R	G	B	W
		270	271	272	273	274	275	276	277	278	279	280	281	282	283

下LHC								
1	2	3	4	5	6	7	8	9
232	233	234	386	387	388	389	390	391

上LHC								
7	8	9	4	5	6	1	2	3
395	396	397	392	393	394	250	251	252

下 F C	13	14	15
	229	230	231
	10	11	12
	226	227	228
	7	8	9
	223	224	225
	4	5	6
220	221	222	
1	2	3	
217	218	219	

上 F C	13	14	15
	247	248	249
	10	11	12
	244	245	246
	7	8	9
	241	242	243
	4	5	6
238	239	240	
1	2	3	
235	236	237	

舞台 下前 F C	1	2	3

舞台 上前 F C	1	2	3

舞台 下前 WC	1	2

※DMX NO.が非表示のコンセントは移動型調光器にて他の回路と差し替えて使用。

舞台 上前 WC	1	2

天井反射板	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307
	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330
	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348					

使用可能DMX
400~512

DMX ch一覧表

場所	DMX	詳細	備考
1B 下	1	I	作業灯1
	2	R	↓
	3	G	↓
	4	B	↓
	5	W	↓
1B 中	6	I	↓
	7	R	↓
	8	G	↓
	9	B	↓
	10	W	↓
1B 上	11	I	↓
	12	R	↓
	13	G	↓
	14	B	↓
	15	W	↓
2B 下	16	I	作業灯2
	17	R	↓
	18	G	↓
	19	B	↓
	20	W	↓
2B 中	21	I	↓
	22	R	↓
	23	G	↓
	24	B	↓
	25	W	↓
2B 上	26	I	↓
	27	R	↓
	28	G	↓
	29	B	↓
	30	W	↓
1BR	31	BR 1-1	
	32	BR 1-2	
	33	BR 1-3	
	34	BR 1-4	
	35	BR 2-1	
	36	BR 2-2	
	37	BR 2-3	
	38	BR 2-4	
	39	BR 3-1	
	40	BR 3-2	
	41	BR 3-3	
	42	BR 3-4	
	43	BR 4-1	
	44	BR 4-2	
	45	BR 4-3	
	46	BR 4-4	
	47	BR 5-1	
	48	BR 5-2	
	49	BR 5-3	
	50	BR 5-4	
	51	BR 6-1	
	52	BR 6-2	
	53	BR 6-3	
	54	BR 6-4	
	55	BR 7-1	
	56	BR 7-2	
	57	BR 7-3	
	58	BR 7-4	
2SUS	59	2S 1-1	
	60	2S 1-2	
	61	2S 1-3	
	62	2S 1-4	
	63	2S 2-1	
	64	2S 2-2	

場所	DMX	詳細	備考
2SUS	65	2S 2-3	
	66	2S 2-4	
	67	2S 3-1	
	68	2S 3-2	
	69	2S 3-3	
	70	2S 3-4	
	71	2S 4-1	
	72	2S 4-2	
	73	2S 4-3	
	74	2S 4-4	
3SUS	75	2S 5-1	
	76	2S 5-2	
	77	2S 5-3	
	78	2S 5-4	
	79	3S 1-1	
	80	3S 1-2	
	81	3S 1-3	
	82	3S 1-4	
	83	3S 2-1	
	84	3S 2-2	
	85	3S 2-3	
	86	3S 2-4	
	87	3S 3-1	
	88	3S 3-2	
	89	3S 3-3	
	90	3S 3-4	
	91	3S 4-1	
	92	3S 4-2	
	93	3S 4-3	
	94	3S 4-4	
4SUS	95	3S 5-1	
	96	3S 5-2	
	97	3S 5-3	
	98	3S 5-4	
	99	4S 1-1	
	100	4S 1-2	
	101	4S 1-3	
	102	4S 1-4	
	103	4S 2-1	
	104	4S 2-2	
	105	4S 2-3	
	106	4S 2-4	
	107	4S 3-1	
	108	4S 3-2	
	109	4S 3-3	
	110	4S 3-4	
FR 下手	111	4S 4-1	
	112	4S 4-2	
	113	4S 4-3	
	114	4S 4-4	
	115	4S 5-1	
	116	4S 5-2	
	117	4S 5-3	
	118	4S 5-4	
	119	FR 1-1	
	120	FR 1-2	
	121	FR 1-3	
	122	FR 1-4	
	123	FR 2-1	
	124	FR 2-2	
	125	FR 2-3	
	126	FR 2-4	
	127	FR 3-1	
	128	FR 3-2	

場所	DMX	詳細	備考
FR 下手	129	FR 3-3	
	130	FR 3-4	
	131	FR 4-1	
	132	FR 4-2	
	133	FR 4-3	
	134	FR 4-4	
	135	FR SF4-1	
	136	FR SF4-2	
	137	FR SF4zoom1	
	138	FR SF4zoom2	
FR 上手	139	FR1-1	
	140	FR1-2	
	141	FR1-3	
	142	FR1-4	
	143	FR2-1	
	144	FR2-2	
	145	FR2-3	
	146	FR2-4	
	147	FR3-1	
	148	FR3-2	
	149	FR3-3	
	150	FR3-4	
	151	FR4-1	
	152	FR4-2	
	153	FR4-3	
	154	FR4-4	
	155	F R SF4-1	
	156	F R SF4-2	
	157	FR SF4zoom1	
	158	FR SF4zoom2	
1CL	159	上段 1	
	160	上段 2	
	161	下段 1	
	162	下段 2	
	163	上段 3	
	164	上段 4	
	165	下段 3	
	166	下段 4	
	167	上段 5	
	168	上段 6	
	169	下段 5	
	170	下段 6	
	171	下 SF-4	
	172	上段 7	
	173	上段 8	
	174	下段 7	
	175	下段 8	
	176	上段 9	
	177	上段 10	
	178	下段 9	
	179	下段 10	
	180	上 SF-4	
	181	上段 11	
	182	上段 12	
	183	下段 11	
	184	下段 12	
	185	上段 13	
	186	上段 14	
	187	下段 13	
	188	下段 14	
	189	上段 15	
	190	上段 16	
191	下段 15		
192	下段 16		

場所	DMX	詳細	備考
2CL	193	下1	
	194	下2	
	195	下3	
	196	下4	
	197	下5	
	198	下6	
	199	上1	
	200	上2	
	201	上3	
	202	上4	
PS	203	上5	
	204	上6	
	205	下1	
	206	下2	
	207	下3	
	208	下4	
	209	上1	
	210	上2	
	211	上3	
	212	上4	
フロア 下手	213	中1	
	214	中2	
	215	中3	
	216		
	217	FC 1	
	218	FC 2	
	219	FC 3	
	220	FC 4	
	221	FC 5	
	222	FC 6	
フロア 上手	223	FC 7	
	224	FC 8	
	225	FC 9	
	226	FC 10	
	227	FC 11	
	228	FC 12	
	229	FC 13	
	230	FC 14	
	231	FC 15	
	232	LHC 1	
UH 下	233	LHC 2	
	234	LHC 3	
	235	FC 1	
	236	FC 2	
	237	FC 3	
	238	FC 4	
	239	FC 5	
	240	FC 6	
	241	FC 7	
	242	FC 8	
UH 下	243	FC 9	
	244	FC 10	
	245	FC 11	
	246	FC 12	
	247	FC 13	
	248	FC 14	
	249	FC 15	
	250	LHC 1	
	251	LHC 2	
	252	LHC 3	
	253		
	254		
	255	I	
	256	R	

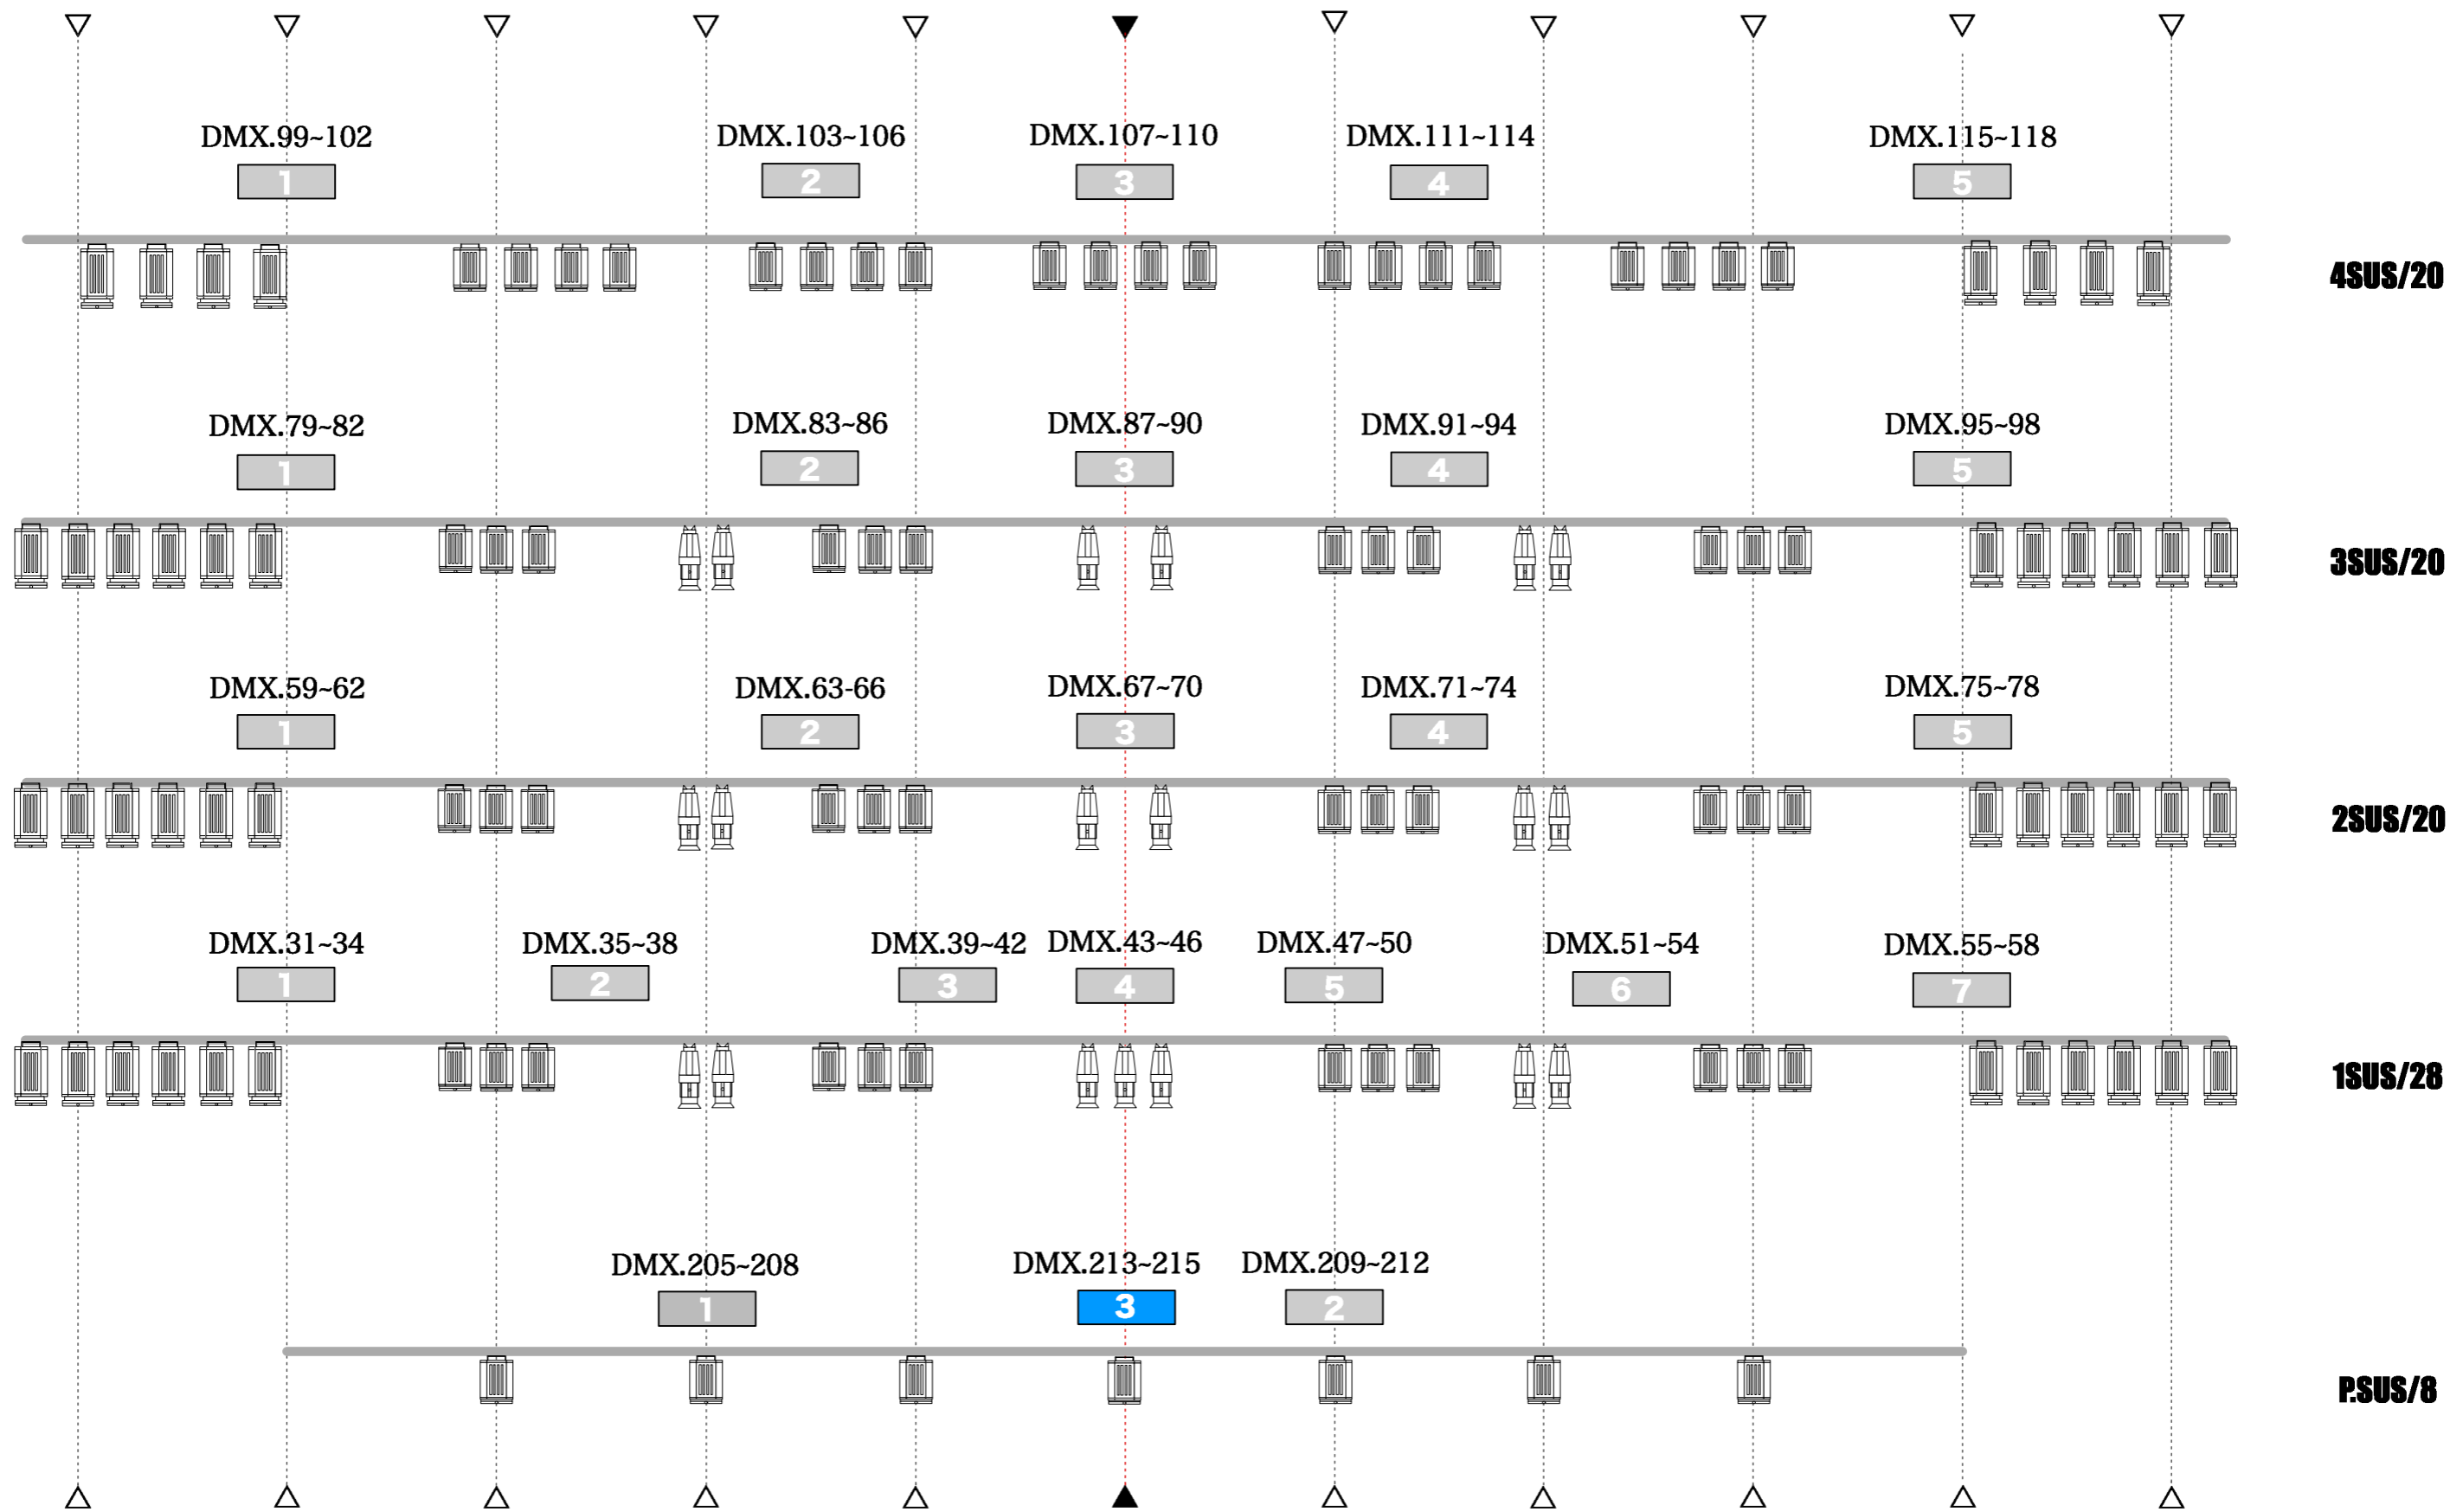 
DMX ch一覧表

 

 
場所	DMX	詳細	備考
UH 下	257	G	
	258	B	
	259	W	
UH 中	260	I	
	261	R	
	262	G	
	263	B	
264	W		
UH 上	265	I	
	266	R	
	267	G	
	268	B	
269	W		
LH 下	270	I	
	271	R	
	272	G	
	273	B	
274	W		
LH 中	275	I	
	276	R	
	277	G	
	278	B	
279	W		
LH 上	280	I	
	281	R	
	282	G	
	283	B	
284	W		
天反DL	285	作業灯3	天反DL
	286	↓	
	287	↓	
	288	↓	
	289	↓	
	290	↓	
	291	↓	
	292	↓	
	293	↓	
	294	↓	
	295	↓	
	296	↓	
	297	↓	
	298	↓	
	299	↓	
	300	↓	
	301	↓	
	302	↓	
	303	↓	
	304	↓	
	305	↓	
	306	↓	
	307	↓	
	308	↓	
	309	↓	
	310	↓	
	311	↓	
	312	↓	
313	↓		
314	↓		
315	↓		
316	↓		
317	↓		
318	↓		
319	↓		
320	↓		

場所	DMX	詳細	備考
天反DL	321	作業灯3	作業灯3
	322	↓	
	323	↓	
	324	↓	
	325	↓	
	326	↓	
	327	↓	
	328	↓	
	329	↓	
	330	↓	
	331	↓	
	332	↓	
	333	↓	
	334	↓	
	335	↓	
	336	↓	
	337	↓	
	338	↓	
	339	↓	
	340	↓	
	341	↓	
	342	↓	
	343	↓	
	344	↓	
	345	↓	
	346	↓	
	347	↓	
	348	↓	
客席DL	349	作業灯4	客席DL
	350	↓	
	351	↓	
	352	↓	
	353	↓	
	354	↓	
	355	↓	
	356	↓	
	357	↓	
	358	↓	
GM 連動	359	↓	
	360	↓	
	361	↓	
	362	↓	
	363	↓	
	364	↓	非常灯 連動
365	CH 1		
366	CH 2		
367	CH 3		
368	CH 4		
369	CH 5		
370	CH 6		
371			
372			
373			
374			
375			
376			
377			
378			
379			
380			
381			
382			
383			
384			

場所	DMX	詳細	備考
フロア 下手	385		
	386	LHC 4	
	387	LHC 5	
	388	LHC 6	
	389	LHC 7	
	390	LHC 8	
	391	LHC 8	
	392	LHC 4	
フロア 上手	393	LHC 5	
	394	LHC 6	
	395	LHC 7	
	396	LHC 8	
	397	LHC 8	
	398		
	399		
400			
401			
402			
403			
404			
405			
406			
407			
408			
409			
410			
411			
412			
413			
414			
415			
416			
417			
418			
419			
420			
421			
422			
423			
424			
425			
426			
427			
428			
429			
430			
431			
432			
433			
434			
435			
436			
437			
438			
439			
440			
441			
442			
443			
444			
445			
446			
447			
448			

場所	DMX	詳細	備考
	449		
	450		
	451		
	452		
	453		
	454		
	455		
	456		
	457		
	458		
	459		
	460		
	461		
	462		
	463		
	464		
	465		
	466		
	467		
	468		
	469		
	470		
	471		
	472		
	473		
	474		
	475		
	476		
	477		
	478		
	479		
	480		
	481		
	482		
	483		
	484		
	485		
	486		
	487		
	488		
	489		
	490		
	491		
	492		
	493		
	494		
	495		
	496		
	497		
	498		
	499		
	500		
	501		
	502		
	503		
	504		
	505		
	506		
	507		
	508		
	509		
	510		
	511		
	512		



-  1 kw平トツ
-  1 kwフレネル
-  S-4 26°

DMX-Add

1

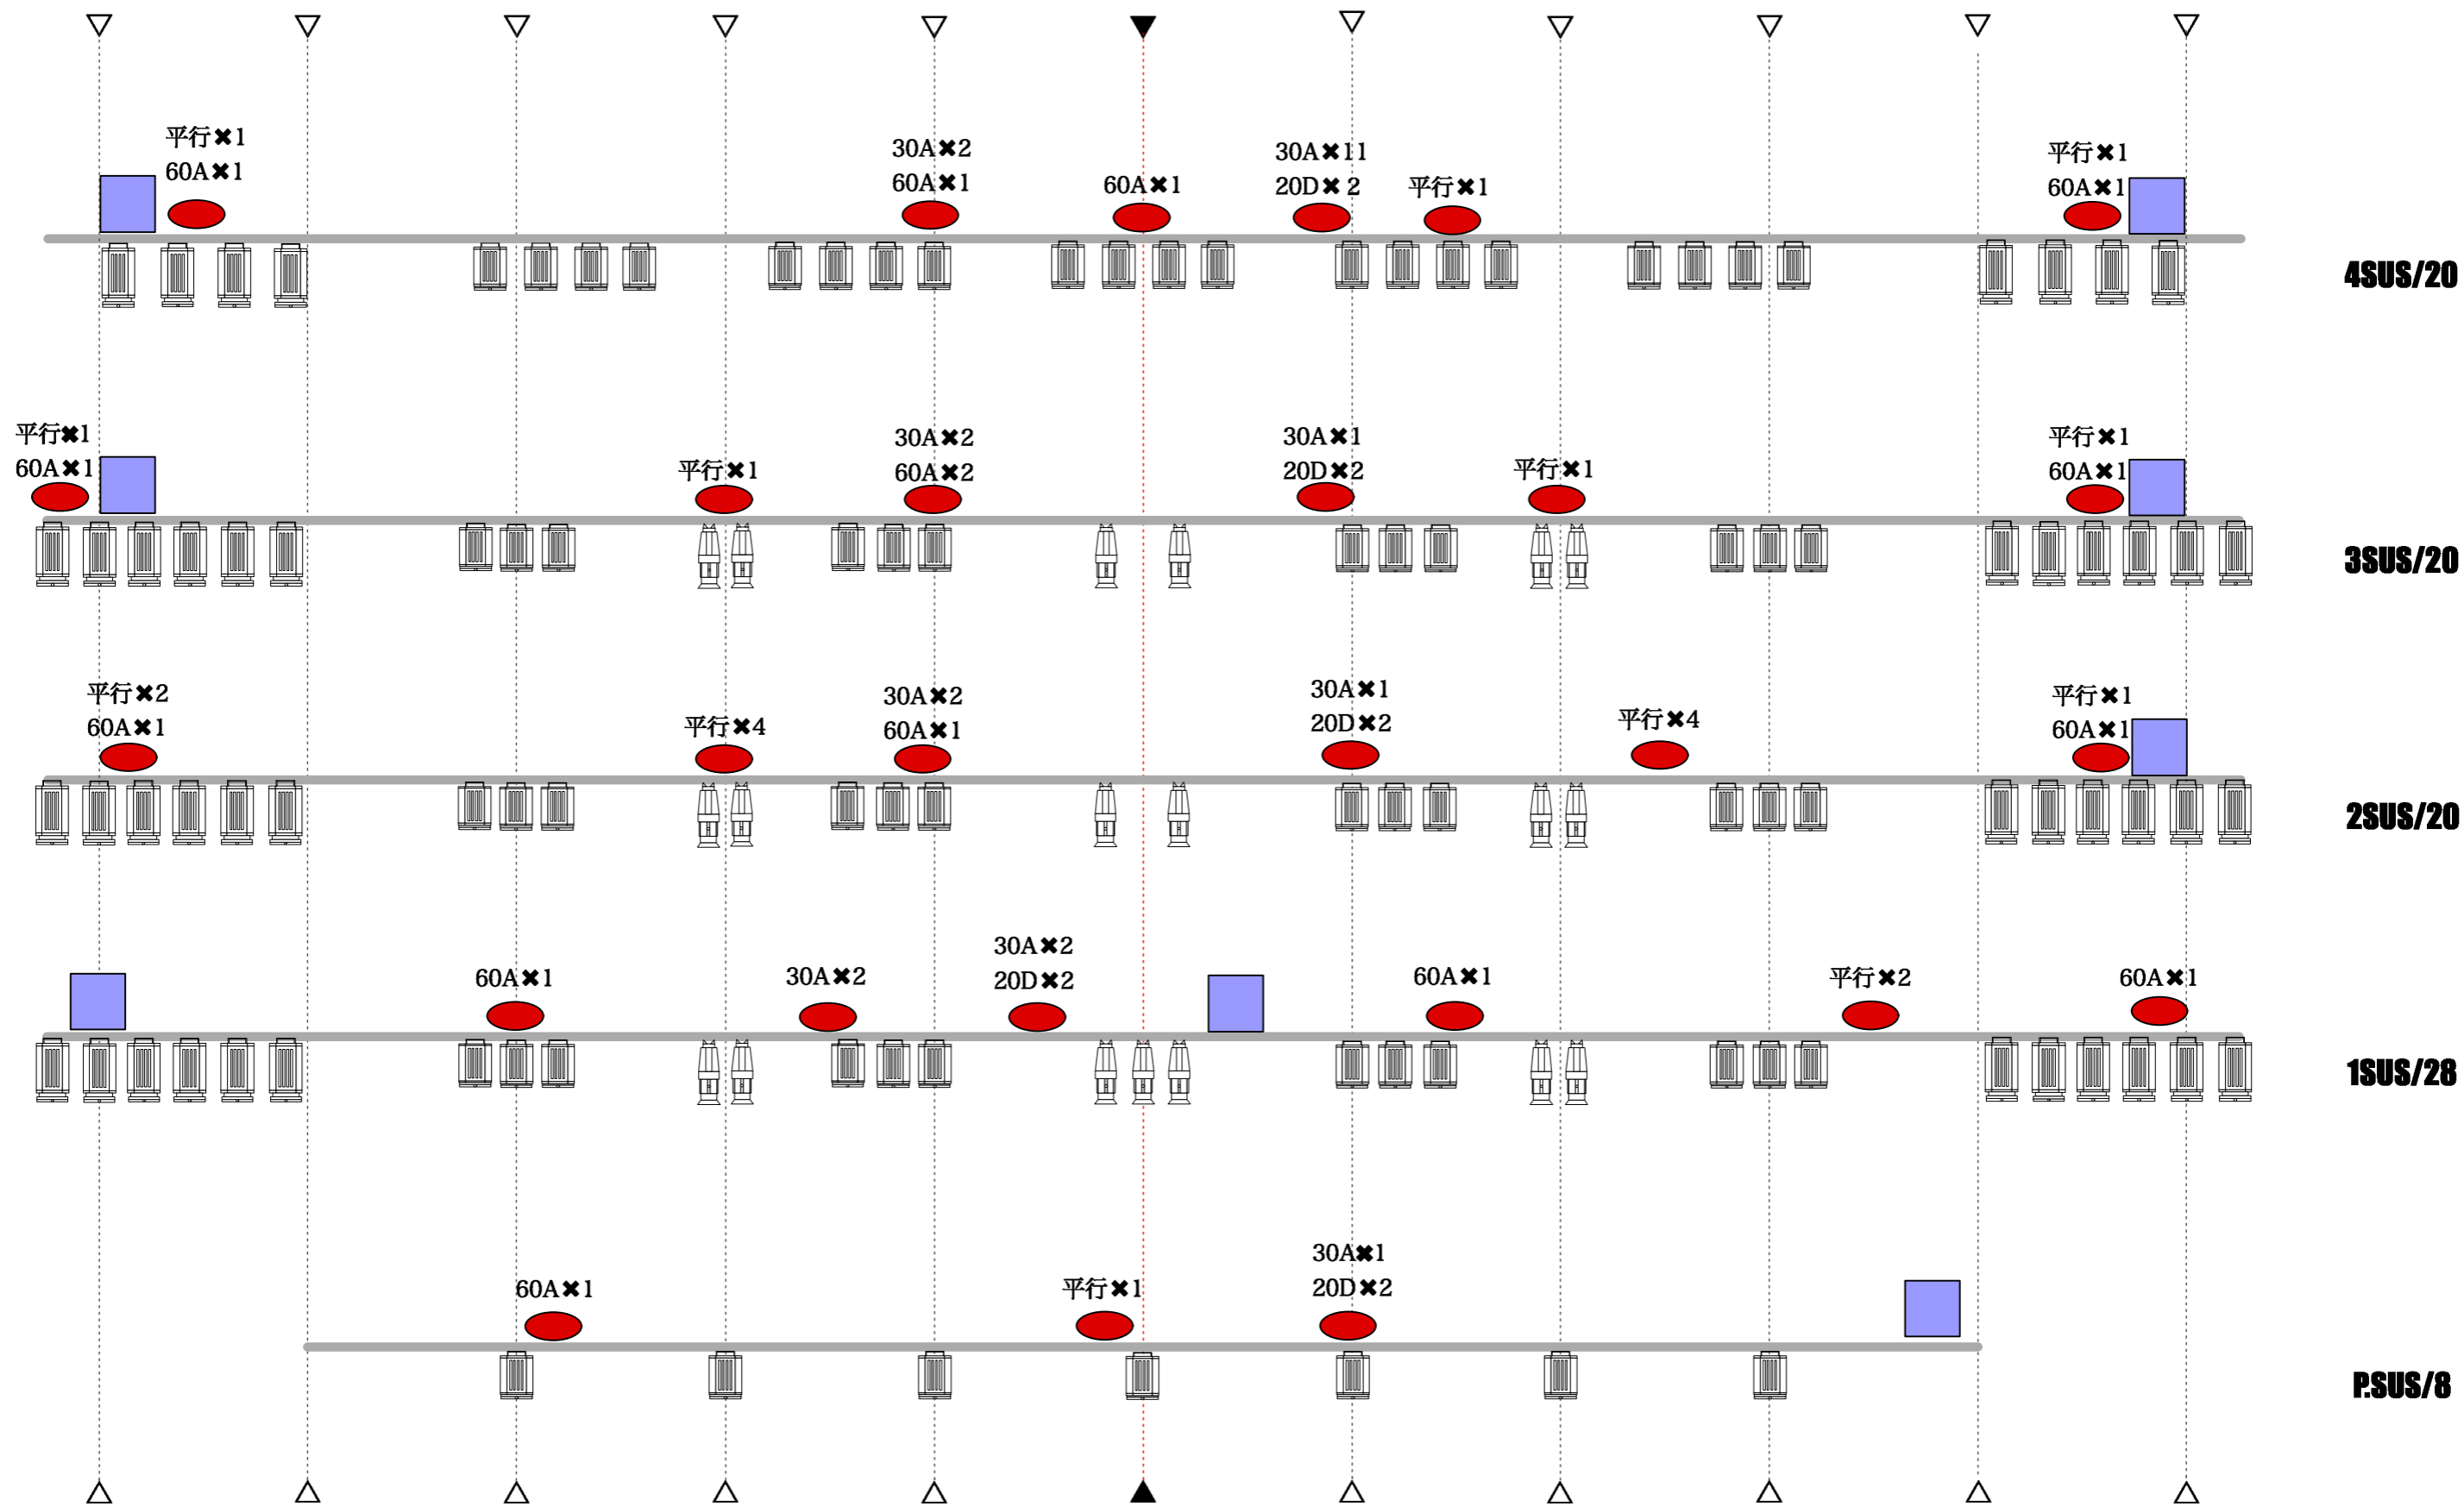 
移動ユニット：4回路
1回路20A/4回路MAX60A

 

 
DMX-Add



3

移動ユニット：3回路
1回路15A/3路MAX30A

荘銀タクト鶴岡：移動ユニット吊位置・Add



-  1 kw平トツ
-  1 kwフレネル
-  S-4 26°

-  DMX out Box:5Pin/2回線
-  直電源

荘銀タクト鶴岡 SUS直電源・DMX Box位置